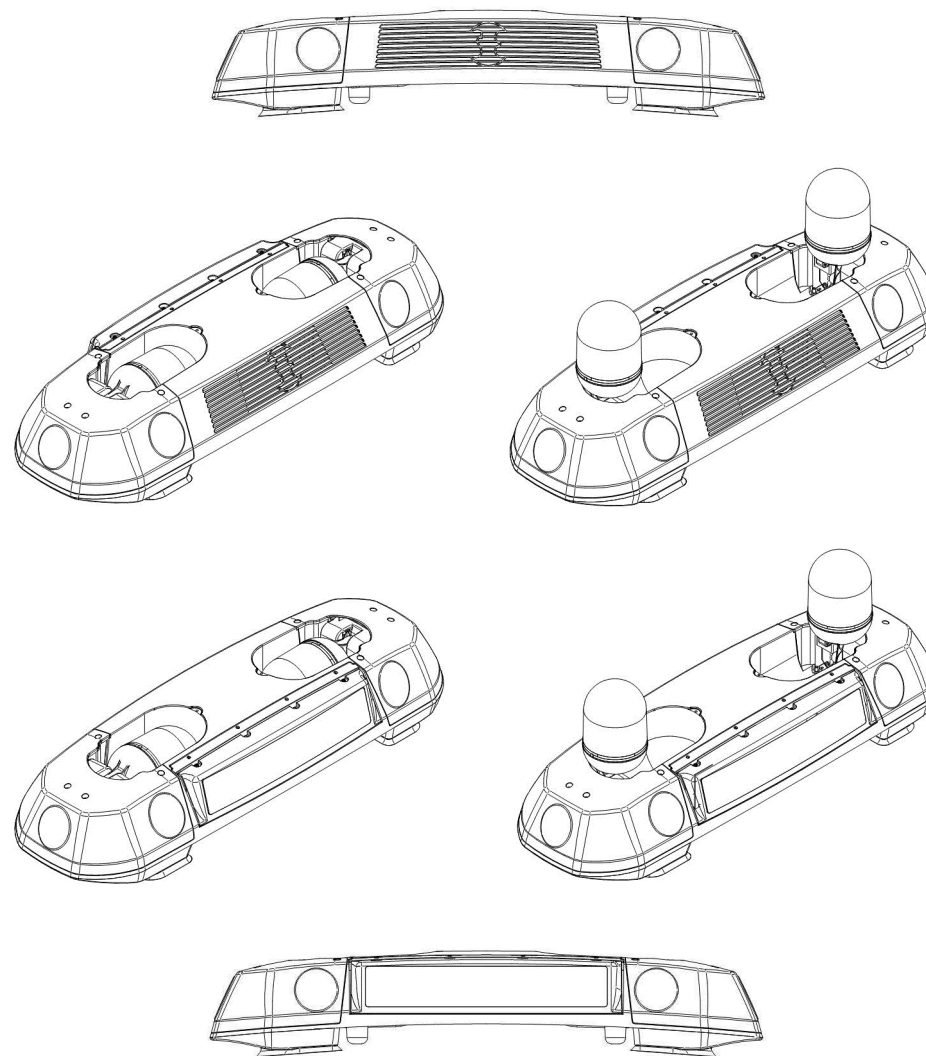


**INSTALLATION AND APPLICATION INSTRUCTIONS**

## INDEX

- Page 2** Guarantee and recommendations
- Page 3** Programming and functions of the console panel
- Page 4** TCE Remote control functions for the crossbar
- Page 5** Quick guide to programming the console panel
- Pages 6-7-8** User interface functioning
- Page 9** RCM Radio remote control functions and re-programming
- Page 10** Dimensional drawing for fixing holes
- Page 11-12-13-14** Procedure for wiring the crossbar to the vehicle roof
- Pages 15-16-17** Maintenance and replacement of the bulbs and light assemblies
- Page 18** Technical details
- Page 19** Electrical wiring diagram

## GUARANTEE AND RECOMMENDATIONS

New Compact is made with high-quality materials and components according to the most recent production standards and strict technical specifications.

This product identified by the serial number stated below has undergone successfully all the mechanical, electrical and physical tests necessary to assure excellent reliability and perfect functioning of the product.

In order to maintain the above mentioned qualities the following recommendations must be strictly observed:

To install New Compact follow carefully the instructions in this manual.

Use ORIGINAL SIRENA spare parts ONLY.

To clean New Compact, made of polycarbonate, use water and mild soap only.

Certain detergents and, in particular, greasy and oily substances can deteriorate the mechanical characteristics of the materials.


For any assistance required please state the serial number shown below that corresponds to the file kept in SIRENA containing information relating to the characteristics and tests of that particular product.

**New Compact TYPE:**

**SERIAL NO.:**

**DATE:**

## Functions and programming the console panel

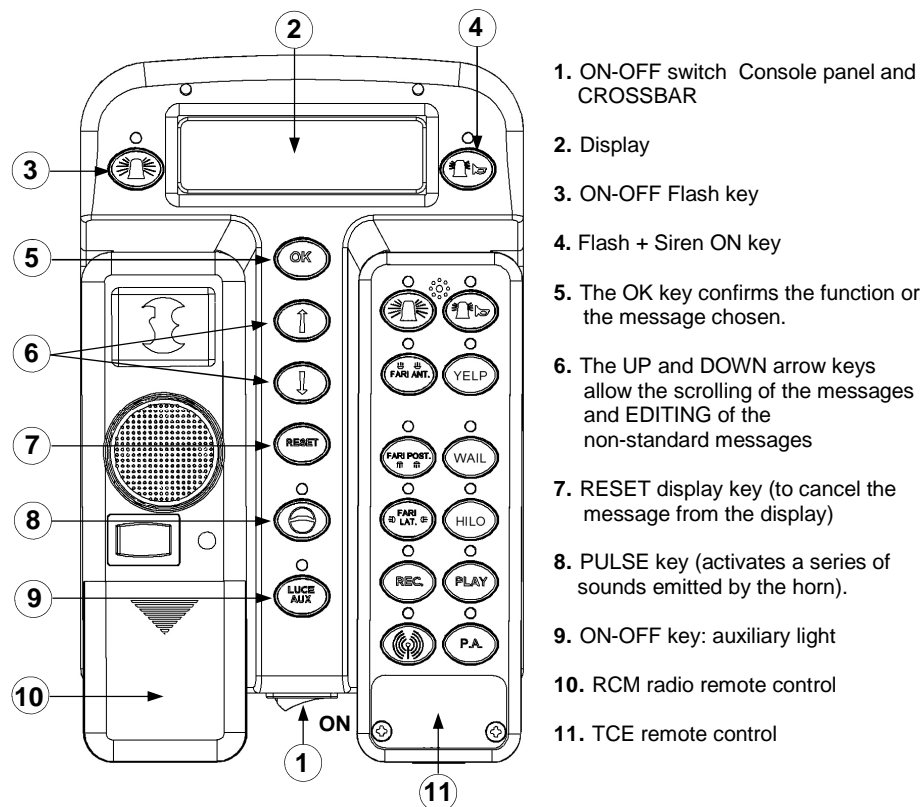

## PROCEDURE TO SEND MESSAGE



A - Push the button ON - OFF (1) (wait for OK on display (2))

B - Push the ARROWS (6) to select one of the following messages :

- |                         |                                |
|-------------------------|--------------------------------|
| 1. SLOW DOWN            | 11. CHANGE LANE                |
| 2. FOG                  | 12. DOCTOR REQUIRED            |
| 3. TRAFFIC JAM          | 13. SPEED CONTROL              |
| 4. ACCIDENT             | 14. FOG MAX SPEED 50           |
| 5. STOP POLICE          | 15. RAIN MAX SPEED 110         |
| 6. PULL OVER - RIGHT    | 16. SNOW MAX SPEED 90          |
| 7. PULL OVER - LEFT     | 17. SNOW REDUCE SPEED          |
| 8. STAY INSIDE CAR      | 18. SNOW CHAINS TIRES REQUIRED |
| 9. COMPULSORY DIVERSION | 19. SNOW CHAINS TIRES CONTROL  |
| 10. SLOW MOVING TRAFFIC | 20. **** *.....* ****          |

C - Push OK (5) to confirm and send the message.

## TCE Remote Control Functions

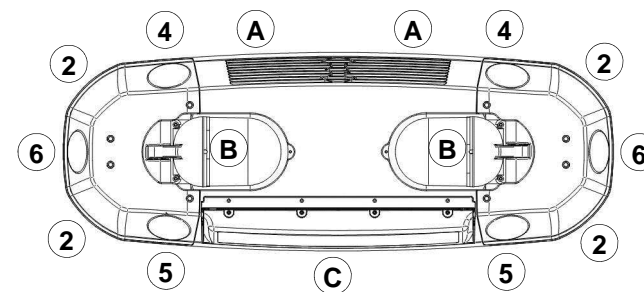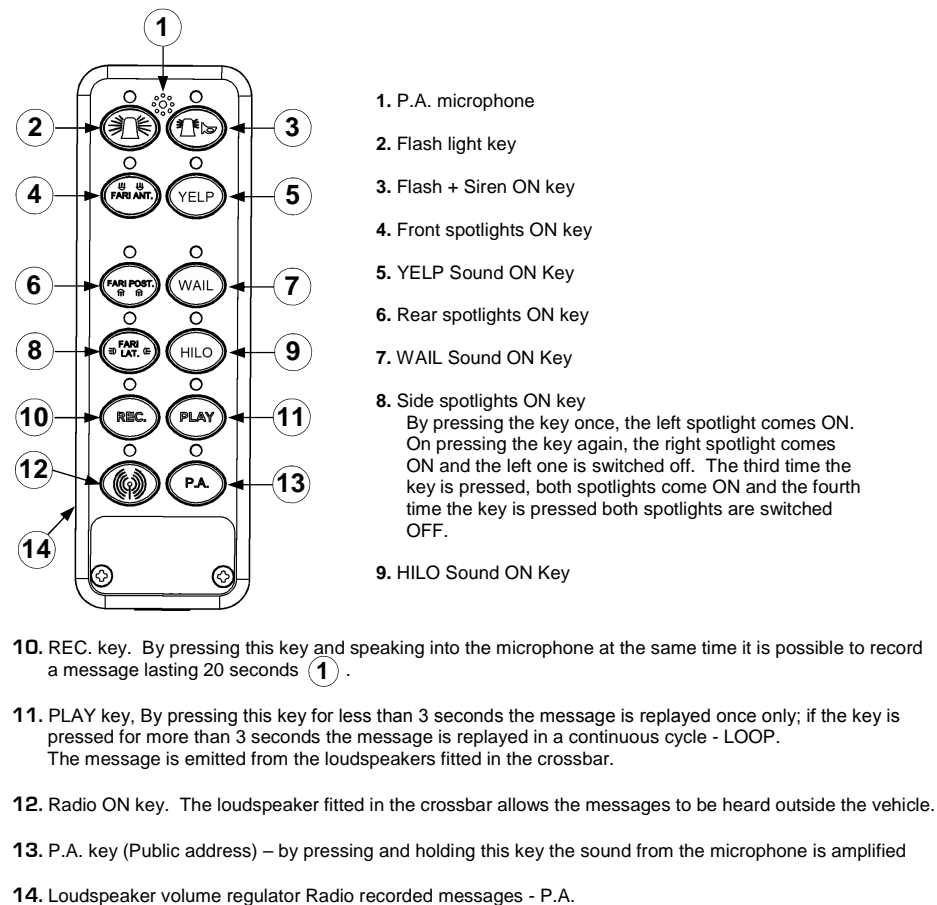

A. Loudspeaker for Public Address of the recorded messages and communication by radio.

B. Depth spotlight radio remote controlled or if available video recorder.

C. Display

## Quick guide to programming the console panel

### Procedure to record and transmit messages to the display

- 1) To switch the console panel **ON** press the ↓ key and hold.
- 2) Select the no. of the new message with the ↑ ↓ keys.
- 3) Press the **OK** key .
- 4) If the message selected already contains characters they must be cancelled by pressing the ↑ key and holding until all the characters have been cancelled. The new message can then be written.
- 5) Select the required characters with the ↑ ↓ keys and for each character press **OK**.
- 6) At the end of the first word (W1) press the **OK** key and hold to proceed to (W2).
- 7) Write the second word (W2), see point 5, then press the **OK** key and hold to proceed to (W3 and W4) and press again the **OK** key to conclude. The phrase **EDIT MESSAGGI** will appear and a new message can then be inserted starting from point 2.
- 8) To insert empty spaces inside a word (W) press the ↓ key and hold.
- 9) To transmit newly recorded messages the **RESET** key must be pressed beforehand. The message can then be selected with the ↑ ↓ keys and they are transmitted by pressing the **OK** key.

## Display Interface functioning

Use the ARROW keys (6) to scroll the menu of the console panel functions and confirm the function required by pressing the OK key (5). (See page 3 - Programming and functions of the console panel).

The normal running mode of the console panel is inserted at the time it is switched ON. (Mode Selection and Display Message)

To insert a **special mode** one of the function keys must be pressed and held. According to the function key pressed when it is switched ON the following modes are entered:

- |   |                         |
|---|-------------------------|
| 1. Arrow Up                               | = Select language       |
| 2. Arrow Down                             | = Write message         |
| 3. Contemporarily Arrow Up and Arrow Down | = Reset Messages Custom |

### Selection Mode and Message Display

A welcome message will appear for a few seconds at the time the device is switched on.



After which the first line will show a series of points.



The second line will contain "**SEL MESS.**" indicating the actual mode.

By pressing one of the arrow keys the second line will show the pre-recorded messages in sequence, followed by the ones to be defined. The number of the message will appear on the right. The four words of the message will alternate and the word number will appear on the left: "**W1**" – "**W2**" – "**W3**" – "**W4**".



Once the required message is found, press **OK** and the message is transferred to the display.

The first line will show the actual message on the display.

The number of the message will appear on the left-hand side of the display, while the right-hand side will show "**D1 – D2 – D3 – D4**". The words of the message will alternate and the word number will appear on the left.

The second line will show: SEL. MESS.

The sequence starts again.

### **Writing Mode of the Message (Arrow Downwards when ON)**

Aperture:

The first line will be empty.

The second line contains “**EDIT MESS.**”

By pressing one of the arrow keys, line 1 will show in sequence the recorded messages that can be edited. When the required message has been found press **OK** to proceed with the modification.



Line 1 now contains the text of the message (the first word of the message).

The left-hand side of the display will show the number of the message and the right-hand side the number of the word (from W1 to W4).

The second line will show a complete set of characters to compose the message in alphabetical order.

To move the indicator in the second line use the **Arrow** keys.

If the message has never been edited, it will be made up of a phrase to be completed and some points.

To insert the new text the existing text displayed must be cancelled.

To cancel the characters on the right press the **Arrow Up** key and hold.

The characters are cancelled from right to left and are inserted from left to right.

The character chosen for insertion is highlighted by the indicator in line 2.

The cancellation of the word in edit is obtained by pressing the **Reset Giornale** key.

A space is inserted by pressing and holding the **Arrow Down** key.

To start writing a message assign a character in the first free space of the message, see the character highlighted in line 2.

Confirm the character chosen by pressing the **OK** key.

To confirm a word press and hold the **OK** key.

The next word will appear in line 1 and the writing W1 at the right-end will change to W2, and so on. The procedure starts again.

If you don't want to modify a word, press and hold the **OK** key directly.

Confirm and record the message by pressing and holding for a while the **OK** key at the end of the edit of the fourth word, highlighted by W4.

The words and then the message is registered when the **OK** key is kept continuously pressed at any time during the edit.

At this stage the display now returns to the aperture of the current mode (Writing Mode of the Message) and another message can be selected.

Press the **Reset Giornale** key or switch the device OFF and ON again to exit the Writing Mode of the Message and insert the Selection Mode and Message Display

### **Language Selection Mode (Arrow Upwards when ON)**

Aperture:

The first line contains the current language

The second line contains “**SEL. LANG.**”




To visualize the sequence of the languages available press one of the **Arrow** keys.

The first line now contains the selected language.

By pressing the **OK** key a set of messages in the language chosen will appear and it is possible to return to the standard mode.

Please note that the messages to be selected are now in the language chosen.

## RCM radio remote control functions & reprogramming

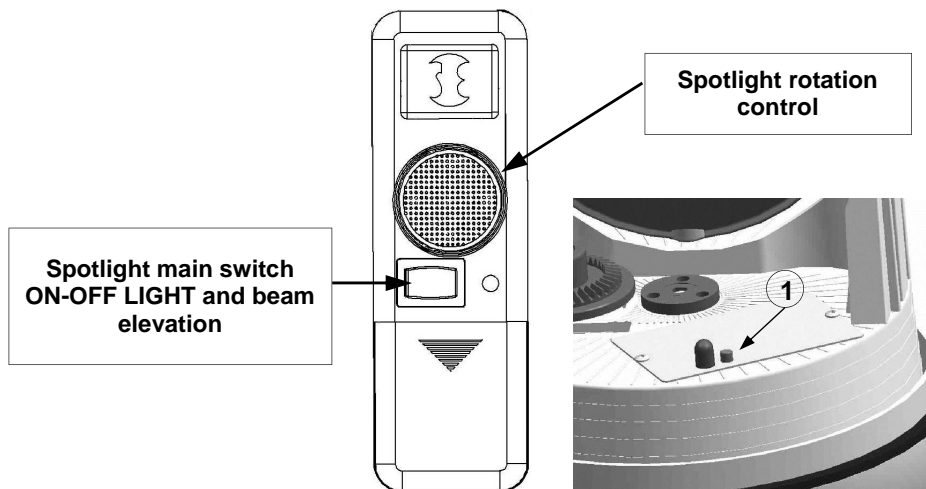



By pressing the main switch once, the spotlight is ON and ready to work. It is then possible to control and direct the light where required. Press the main switch a second time to turn the spotlight OFF. The spotlight will then return to the rest position.

If a duplicate radio remote control is required (FORC version) a spare remote control from SIRENA must be provided. Proceed with programming the new remote control.


Firstly, SWITCH the console ON. Raise the beam by hand and place it to the work position.

Remove the dome from the beam and press key (1); the LED on the beam will come ON. Press any key on the radio remote control and, when the LED on the beam goes OFF, programming has been made. At this stage, put the dome and the protection gasket back on the beam and test the functions.


It is possible to programme up to 4 radio remote controls for one beam. It is also possible to control other beams with one radio remote control (only if they are within its range) either singly or contemporarily. The radio remote control must however be programmed for each beam as described above.

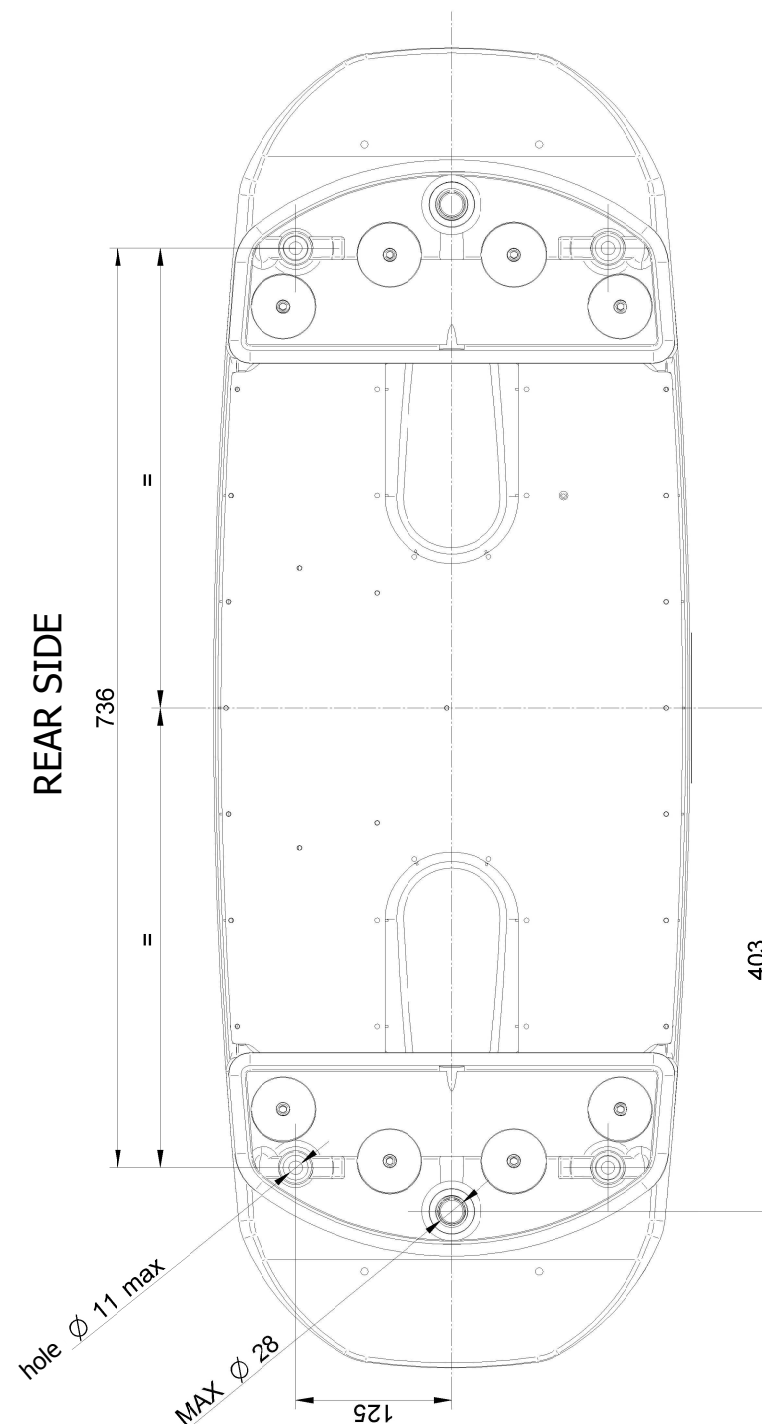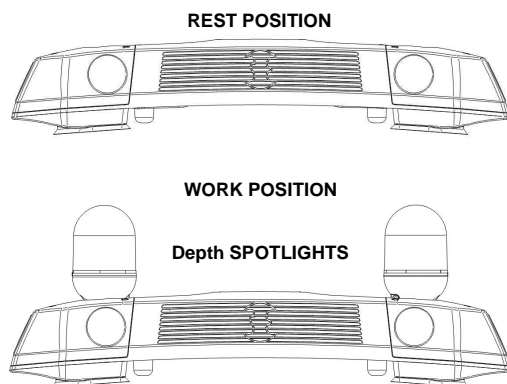

1

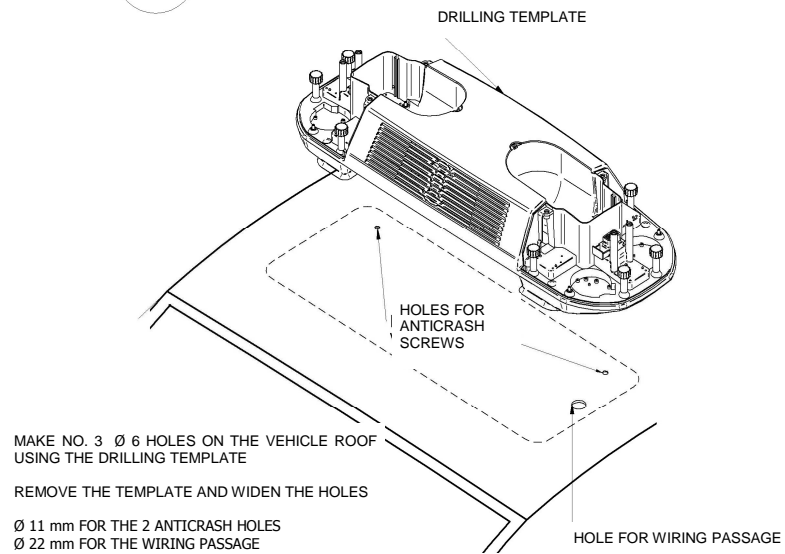


2




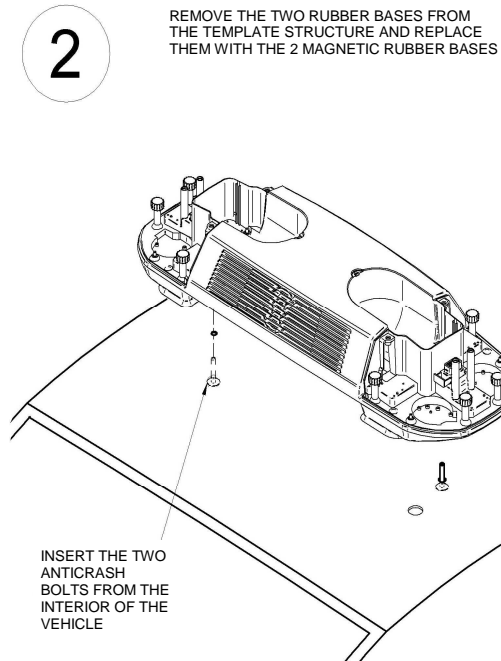


M10 self-blocking bolt

Spacer


Rubber with magnets

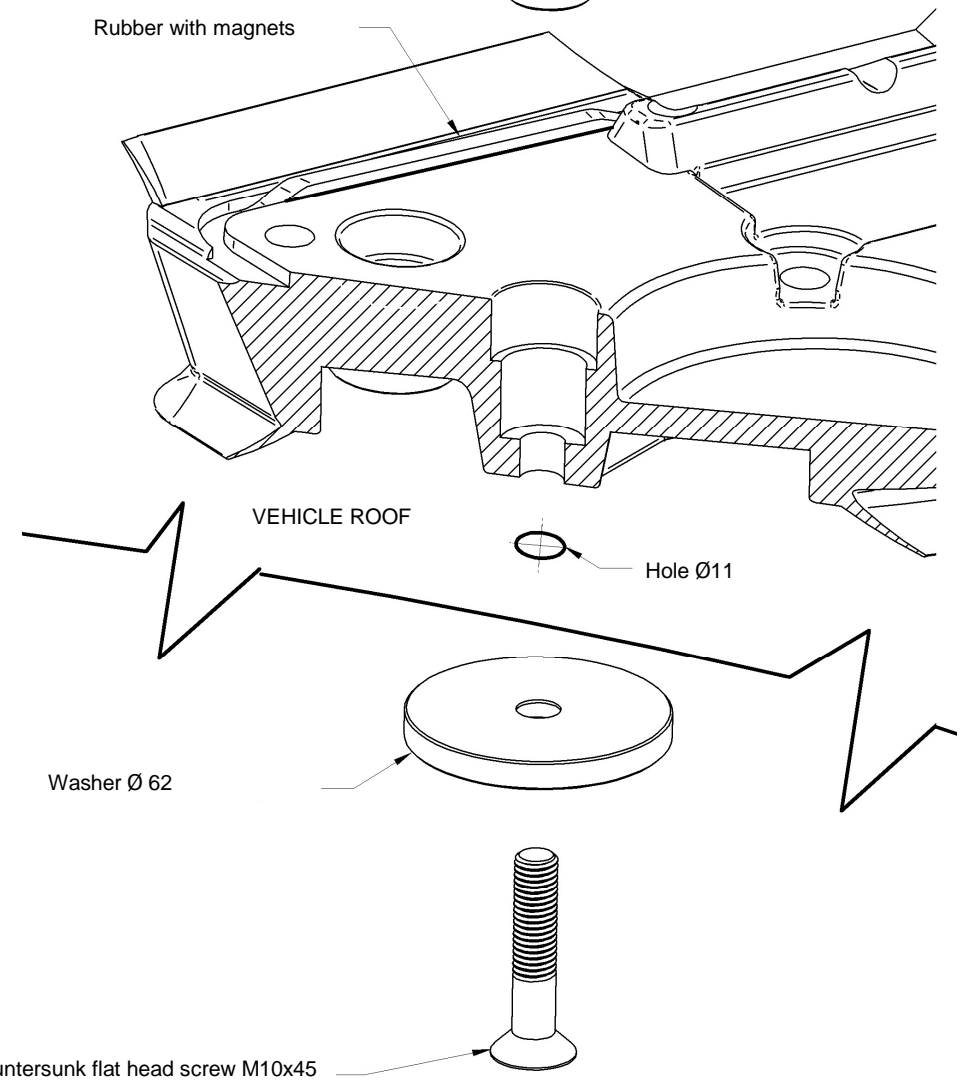

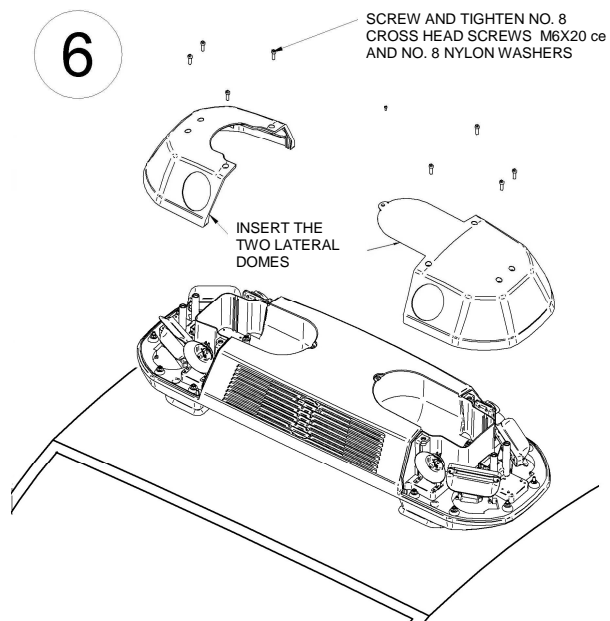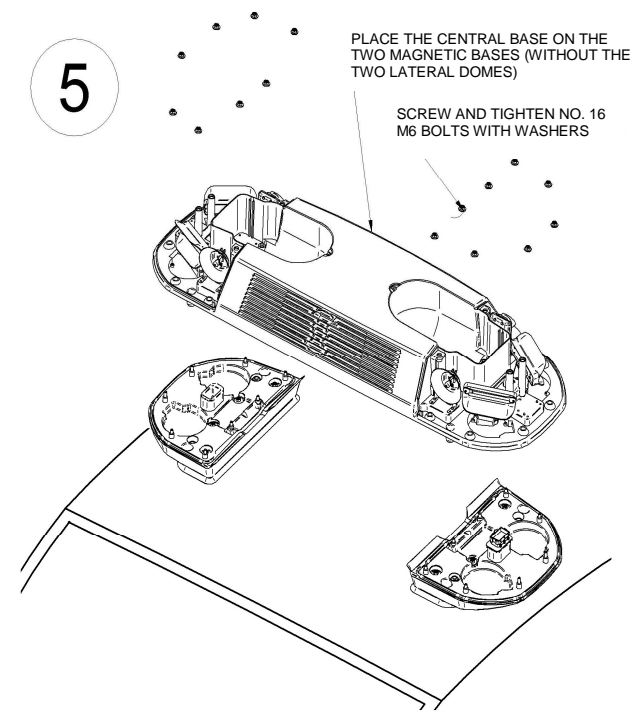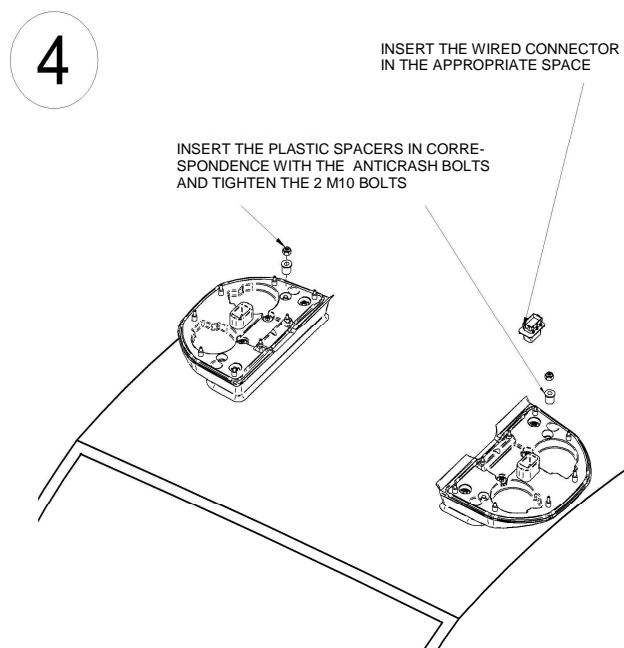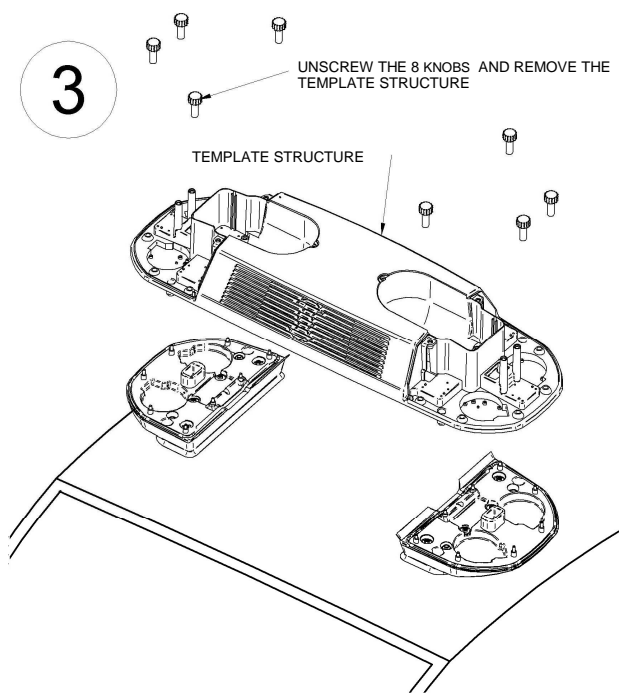




## Maintenance and replacement of the bulbs and light assemblies

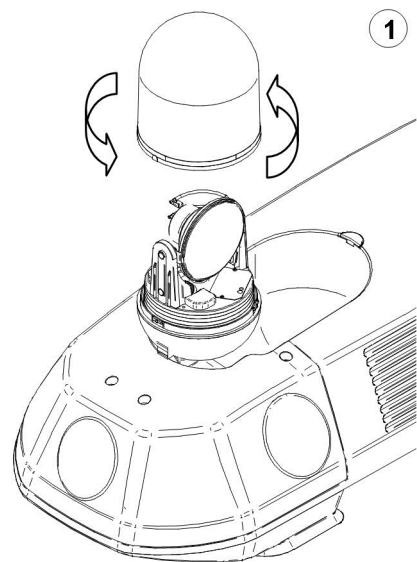


### Replacement of the depth spotlight H1 bulb


Place the spotlight in the work position using the RCM remote control.  
Unscrew the dome anticlockwise and remove it from the base, as shown in fig. 1

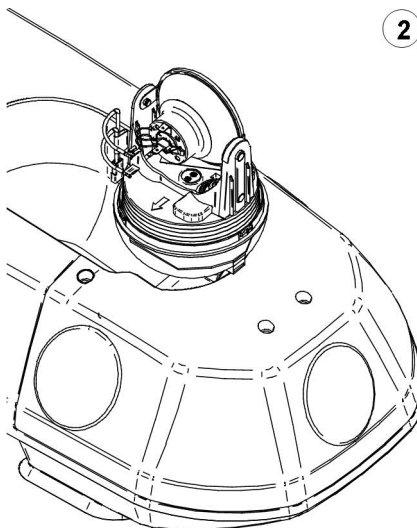


Disconnect the wires from the lamp contacts and insulate the fastons, as power is still present and could cause a short circuit.  
Release then the lamp spring support and remove it from the reflector seat.

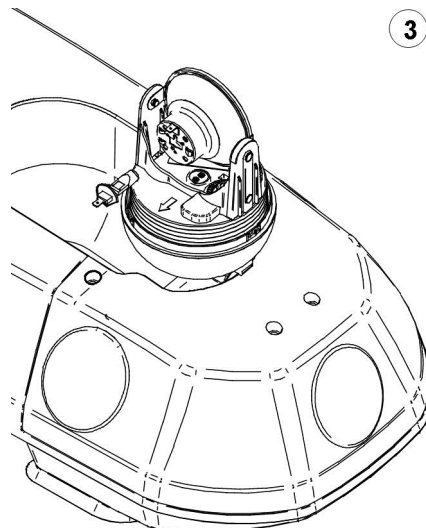

Do not touch the glass bulb with bare fingers when replacing the bulb  
Refasten the spring support and reconnect the wires to the contacts.

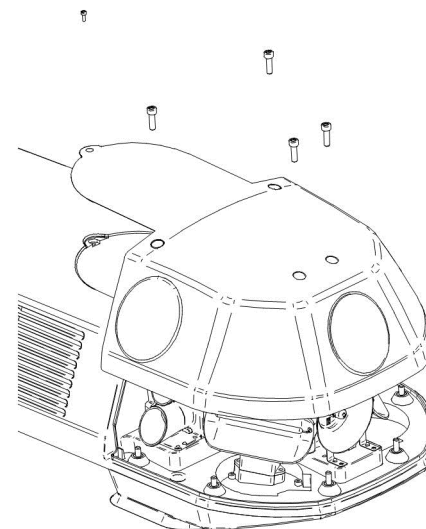

To access the luminous assembly unscrew the dome blocking screws and remove the dome upwards as shown in the drawing.


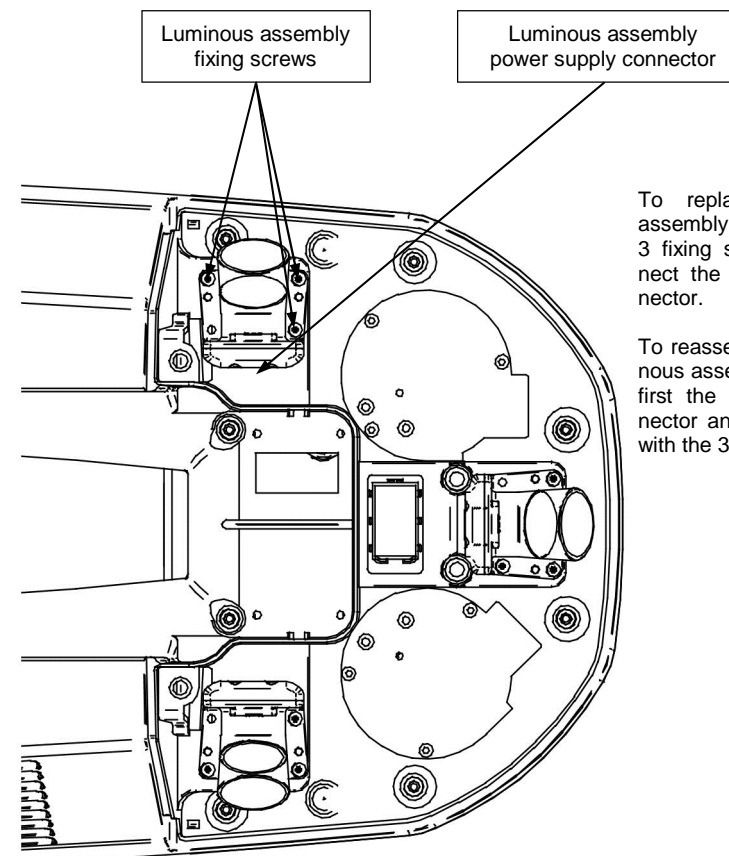


Luminous assembly  
fixing screws

Luminous assembly  
power supply connector

To replace the luminous assembly firstly unscrew the 3 fixing screws and disconnect the power supply connector.

To reassemble the new luminous assembly firstly connect first the power supply connector and fix it to the base with the 3 screws.

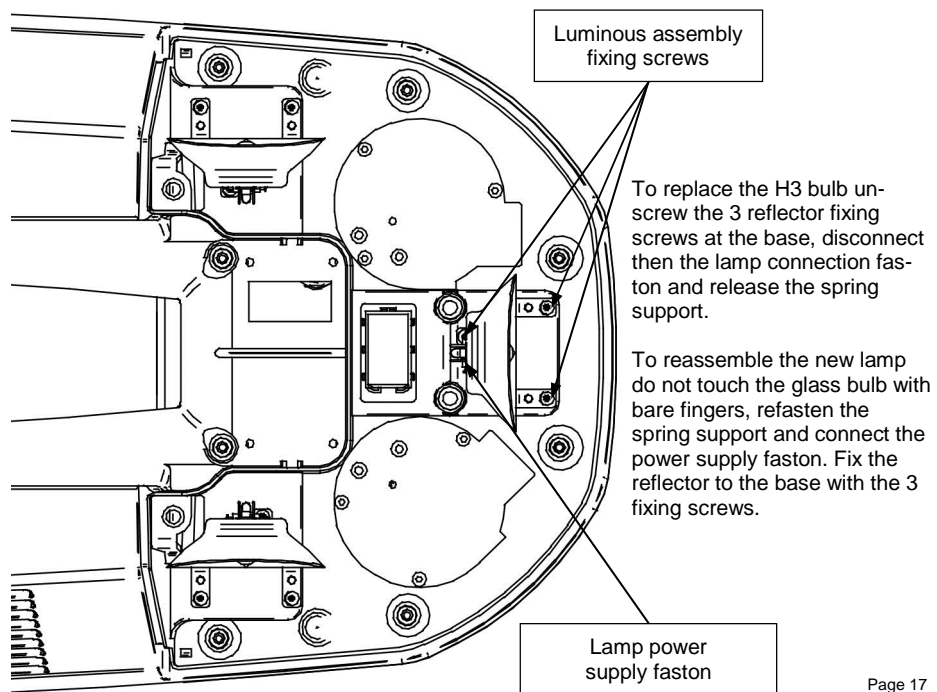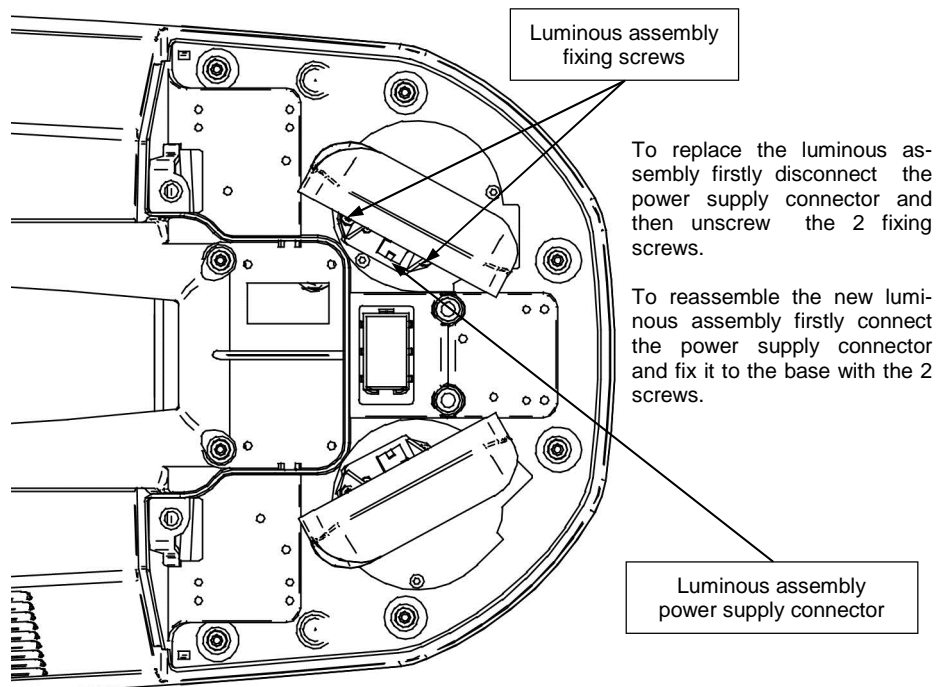

## Technical details

<i>SELECTED FUNCTION</i>	<i>ELEMENTS INVOLVED IN THE FUNCTION</i>	<i>CURRENT ABSORPTION</i>
<b>CONSOLE PANEL SWITCH-ON</b>	Console panel + Switching card	215 mA
<b>FLASH SWITCH-ON</b>	Console panel + Switching card + Flash generator + 4 bulbs	11.8 A (max); 8.7 A (avg)
<b>FLASH + SIREN SWITCH-ON</b>	Console panel + Switching card + Flash generator (charge = 4 bulbs) + Siren generator (charge = no.2 50W 16 ohm units)	13.7 A (max); 12.2 A (avg)
<b>LUMINOUS DISPLAY</b>	Console panel + Switching card + Led display panel	1.5 A (5 with luminous message)
<b>AMBER FLASHING LED SPOTLIGHTS</b>	Console panel + Switching card + LED spotlights	1.1 A (max); 0.65 A (avg)
<b>FRONTAL AND REAR HALOGEN SPOTLIGHTS</b>	Console panel + Switching card + Spotlights	1 spotlight on: 4.6 A 2 spotlights on: 9.2 A 4 spotlights on: 18.5 A
<b>P.A. MODULE</b>	Console panel + Switching card + Functioning P.A. module	1.2 A
<b>SWIVEL SEARCH BEAM</b>	Console panel + Switching card + Swivel search beam	5.1 A

