

LED work lamp - Installation Instruction

L0068, L0068f, L0072, L0073, L0074, L0075, L0076, L0076S, L0077, L0077S, L0081, L0081s, L0082, L0089, L0091, L0091-B, L0093f, L0093, L0094, L0094f, L0097, L0097s, L0099, L0099f, L0102, L0102F, L0103, L0105, L0106, L0107s, L0111, LB0001, LB0002FS, LB0002s, LB0002f, LB0003, LB0004, LB0004s, LB0004f, LB0004v, LB0005, LB0005f, LB0005S, LB0005v, LB0006, LB0006s, LB0006f, LB0006v, LB0007, LB0007R, LB0007s, LB0007f, LB0007v, LB0016, LB0016f, LB0017s, LB0017c, LB0017f, LB0018, LB0018s, LB0018f, LB0019, LB0019s, LB0019f, LB0025, LB0026, LB0026f, LB0026s, LB0027, LB0027s, LB0027f, LB0028, LB0028s, LB0028f, LB0029, LB0029s, LB0029f, LB0030, LB0030s, LB0030f, LB0031, LB0031f, LB0032, LB0032s, LB0032f, LB0033, LB0034, LB0034s, LB0034f, LB0035, LB0035s, LB0035f, LB0036, LB0036s, LB0036f, LB0037, LB0038, LB0039f, LB0039s, LB0042, LB0043, LB0044, LB0045, LB0046, LB0047, LB0047s, LB0048, LB0048s, LB0049, LB0049s, LB0050, LB0050s, LB0051, LB0051s, LB0052, LB0052s, LB0053, LB0053s, LB0054, LB0054s, LB0055, LB0055f, LB0056s, LB0058, LB0059, LB0060, LB0061, L2204, L2205

Universal LED work lamps for widespread use (for off-road vehicle, not for use on road traffic)

For proper installation and use of lights it is advisable to read the instructions to ensure personal safety and durability of the products. The device must be installed out of reach of children. The appliance must be fitted out of reach of children.


If you would like to change the existing incandescent/halogen lighting on LED lighting - installation does not require to make any changes, except replacing the lamps.

While installing new / additional LED lighting you must verify the current capacity of the switch to which you are going to connect the lamp. If you exceed the current carrying capacity of the switch to which you want to connect LED lighting, use an additional relay - the installation of lamps should make a professional recording engineer.

Product specification:

Lamps have approvals of electromagnetic compatibility and do not cause electromagnetic interferences.

- **Light:** Flood / Spot / Combo
- **Light color:** cold
- **Material:** aluminum housing (acts as a heat sink)
- **Operating Temperature:** -40 °C to + 80 °C
- **Ground** - black cable, plus - red cable

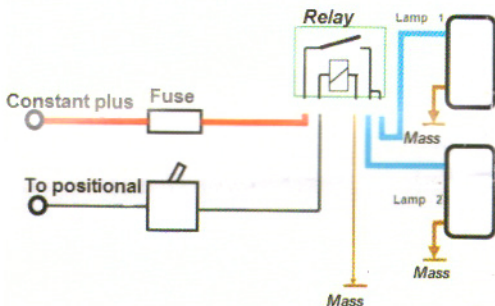

• Package Contains:

- 1pc work light / panel
- Set including screws and mounting brackets
- The plug and socket installation (depending on package).

Warning! Do not look directly into the light - it may cause damage or even loss of vision. Install only in specialized workshops or professional services.

